 



# ULTRASONIC CLEANER CE-6200A USER INSTRUCTION MANUAL

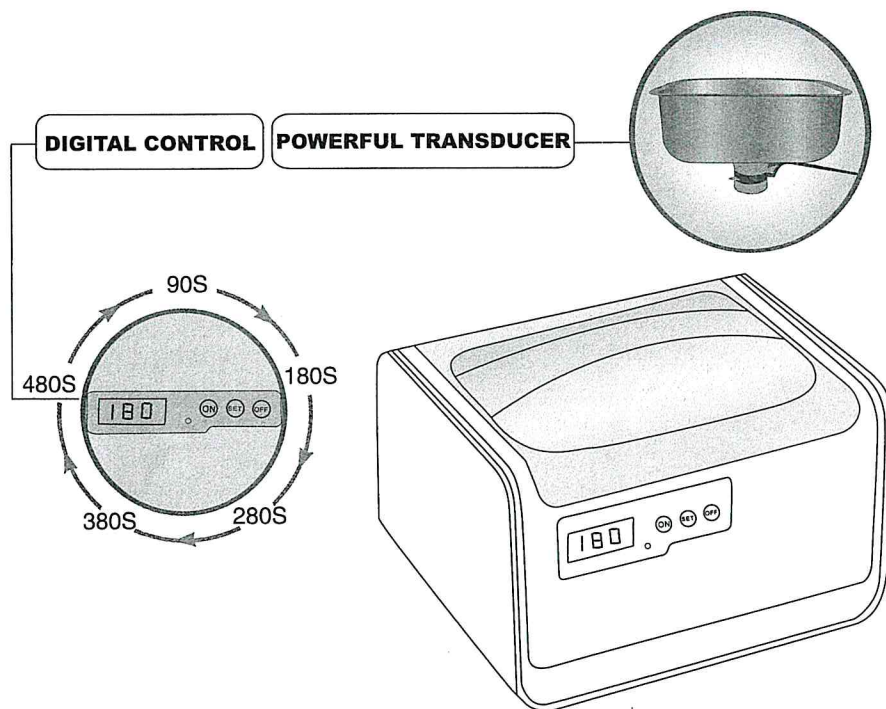

**APPLICATION:** Ideal for glasses, Jewellery, Watches, Mobile phone service center, Dentures, etc.

- ❑ READ THIS 《MANUAL》 BEFORE USING
- ❑ KEEP THIS 《MANUAL》
 
## PRODUCT DRAWING & INDICATION

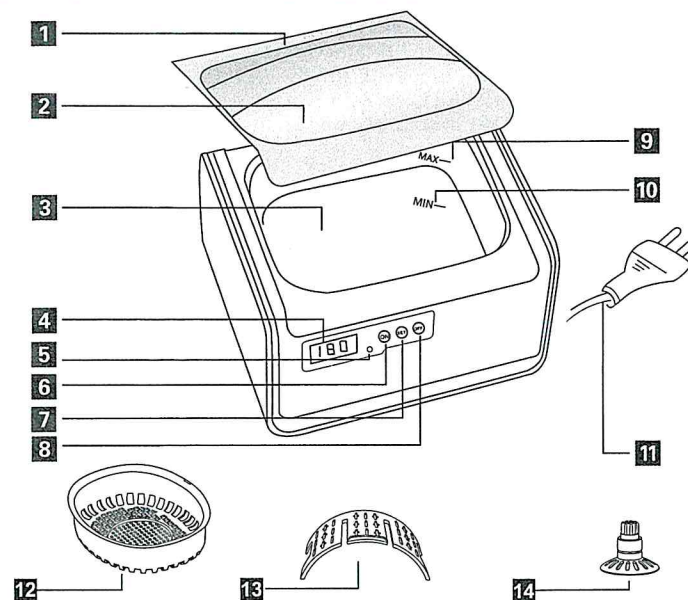

- ❶ LID    ❷ VIEW WINDOW    ❸ STAINLESS STEEL TANK    ❹ DIGITAL DISPLAY
- ❺ INDICATION LIGHT    ❻ ON BUTTON    ❼ TIME SET BUTTON
- ❽ OFF BUTTON    ❽ MAXIMAL WATER LEVEL    ❾ MINIMAL WATER LEVEL
- ❿ POWER CORD    ⓫ CLEANING BASKET    ⓬ WATCH HOLDER    ⓭ CD HOLDER

### SPECIFICATIONS:

 
NAME	ULTRASONIC CLEANER	POWER SUPPLY	AC 100-120V 50/60Hz AC 220-240V 50/60Hz
ITEM NUMBER	CE-6200A	ULTRASONIC POWER	70 W
UNIT SIZE	222×183×157mm	TIMER SETTING	5 CYCLES: → 180s → 280s → 380s → 480s → 90s
TANK SIZE	175×145×70mm	ULTRASONIC FREQUENCY	42KHz
TANK CAPACITY	1400ml	NET WEIGHT	1.6kg

## IMPORTANT SAFETY INSTRUCTIONS


### IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following.


**⊘ WARNING**-To reduce the risk of burn, electrocution, fire or injury to persons

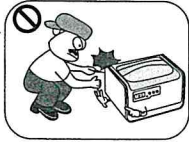

 Do not disassemble the unit except for the authorized serviceman.

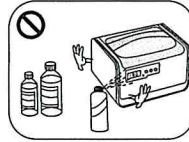

 
Do not fill the tank with abrasives or corrosive chemicals.

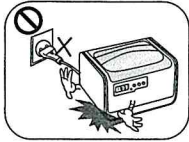


Unplug the unit before filling. Do not exceed the "MAX" mark.



 
Do not wash the unit with water directly to avoid electric shock.

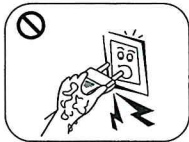

 
Do not touch the socket with wet hand to reduce the risk of electrocution.

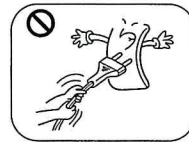

 To unplug, please grasp the plug only, not pull on cord.

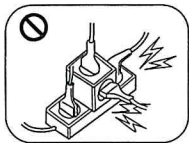

 
Use this unit properly as per its instruction manual. Do not use attachments not recommended by the manufacturer.

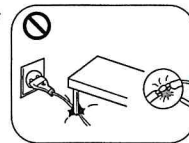


Never operate this unit if cord or plug are damaged. If it is not working properly, or has been dropped into water or damaged, return the damaged unit to a service centre for examination and repair.

## SAFETY INSTRUCTION: READ ALL INSTRUCTIONS BEFORE USING

 
**⚠ DANGER**- To reduce the risk of electrocution:

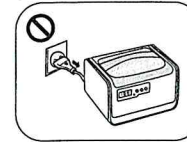

 
Unplug this unit immediately after using.

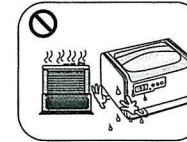

 
Keep the unit away from heated surface, and place it in a dry and flat place.

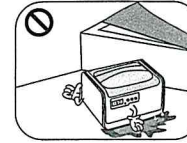

 
Keep the unit in a safe place to avoid falling into water or other liquid.

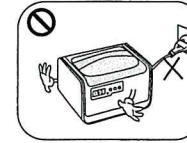

 The unit should never be left unattended when plugged in.

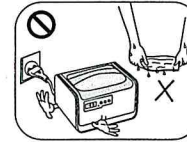

Do not use while bathing.

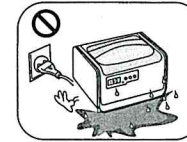 

Do not immerse the unit into water or other liquid.



Do not reach for the unit that has fallen into water. Unplug immediately.




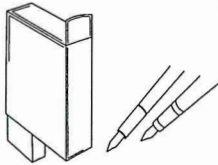 
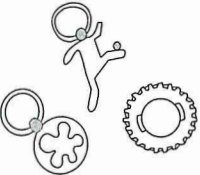 



Any unfirm inlaid item may become loose. Do not put any easy-discolored item into the tank for cleaning, such as cloth products, leather products, wood ware, etc.




Do not put mobile phone or watch which is not waterproof (water proofing capability less than 30 metres) into the tank for cleaning. Do not put any spectacles frame or art ware which is made from shell or hawkbill into the tank for cleaning.


## AVAILABLE FOR:

 Jewellery	Glasses and Timepieces	Commodities
		
Necklaces, Rings, Earrings, Bracelets, etc.	Glasses, Sun Glasses, Watch Chains, Waterproof watches, etc.	Electric shaver heads, Razor blades, Dentures, Combs, Toothbrushes, etc.
Stationery	Metal parts	Dining Appliance
		
Pen-heads, Printer-heads, Seals, etc.	Watch Parts, Ancient coins, Badges, Valves, Machine nozzles, etc.	Forks, Knives, Spoons, etc.


## Dirt eliminated process through ultrasonic technology

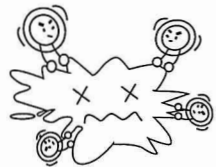

 Many tiny bubbles are generated under the action of ultrasonic.

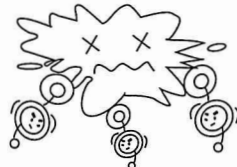


 Bubbles are imploded constantly under the action of ultrasonic to impact the surface of the item.

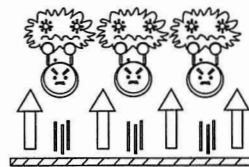


Dirt is split into many granules and separated from the surface of the item, then comes into water.

## OPERATION INSTRUCTIONS

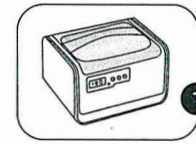 

 
Open the lid and fill stainless steel tank with water.  
Running without water may damage the unit!

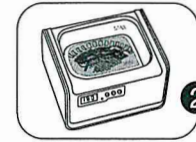

Place item into water.  
The item should be immersed well into the water, ensure the water is above "MIN-" marking but does not exceed the "Max-" marking.



 
Connect the power cord.

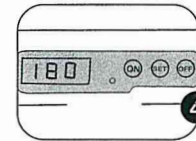


After power on, it will display "180" seconds as default cleaning time. Press "SET" button to select from 5 optional working cycles freely:  
→ 180s → 280s → 380s → 480s → 90s



 Press "ON" to start cleaning and the indication light is on.  
During cleaning, you can hear the "ZI ZI" voice, it means the unit is working.

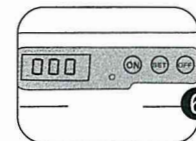


 When reach the time of "000", the unit will auto stop, the light will turn off. If another cleaning is needed, just repeat the above steps. During cleaning, if you want to stop, just press "OFF", and press "ON" again, the unit will implement the remainder program to continue the cleaning. Furthermore, you can press "SET" to renew working cycle.

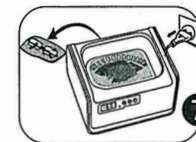

When finished cleaning, unplug it and open the lid, then take out the item. At last, pour the water from stainless steel tank and wipe it up.

## THREE WAYS OF CLEANING

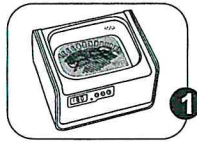 


### GENERAL CLEANING

Use just tap water for general cleaning. The water should merge the item to be cleaned ensure the water is above "MIN-" marking but does not exceed the "Max-" marking.



### ENHANCED CLEANING

 
When the item is smeary or long time not cleaned, add about 15-20ml of detergent into water to enhance about 30% cleaning result.

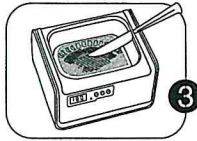

### PARTLY CLEANING


For large items, partly cleaning as shown.
 
## USER MAINTENANCE

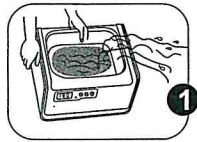


Unplug and empty the unit after using.

 Do not keep water in the tank for a long time.

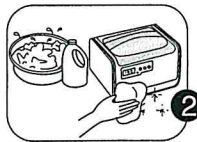

Wipe the tank and unit with dry towel.

 
Avoid washing the complete unit with water to reduce the risk of electrocution.

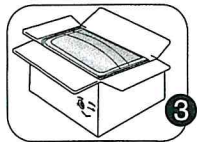

Keep in cool and dry place.

## OPERATION GUIDANCE FOR DISK CLEANING

 When using cloth to clean the dirty disk, it may scratch its surface. While using ultrasonic technology can throw off the dirt effectively (within 2 minutes), and the disk can be protected from scratching.

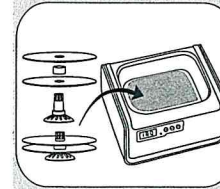


Put the disk (CD, VCD, DVD) onto the disk holder as shown in the picture (two disks can be cleaned at one time). Then put the holder into cleaning tank which is filled with the normal water.

Caution:


1. Don't use warm or hot water, as the print mark on the surface is easily got rid of.
2. The disk can be cleaned whenever it is dirty, but please don't clean the disk for more than two times continuously, otherwise the print mark of the disk is easily got rid of. Generally, 90 seconds for once clean is enough.
3. Ultrasonic can only clean the dirty on the surface of the disk, please note that the disk which is scratched can't resume.

## USAGE OF ACCESSORIES

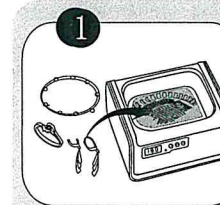 

### PLASTIC BASKET

 When small item is to be cleaned, put the item into plastic basket, then put the basket into the tank. In this way, frictions between the item and the tank can be reduced. Please pay attention, the plastic basket is only used for cleaning small items, because it absorbs about 30% of ultrasonic energy, and reduces the cleaning result. In this case, when using the plastic basket, please refer to the instruction of "Enhanced Cleaning" in this manual.

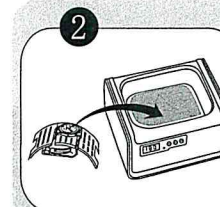

### WATCH STAND

The permeability of ultrasonic is very strong, do not put watch whose water proofing capability less than 30 metres into the tank directly, otherwise water may penetrate into the watch and cause severe damages. It is recommended to use the watchstand for watchband cleaning by simply immersing the watchband into the water while keeping the watch itself on top of water.

Similar to plastic basket, the watch stand also absorbs ultrasonic energy. When the watch stand is used, refer to "Enhanced Cleaning" for effective cleaning result.