


X	X	2000-9617	KIT, TUBING REPLACEMENT CONSISTING OF:
1	26"	0028-7575	TUBING, PLASTIC, .032 I.D. X 13" +/- .06 LONG
2	13"	0028-7576	TUBING, PLASTIC, .062 I.D. X 13" +/- .06 LONG
3	1	X	LABEL, BARCODE
4	1	X	BAG, PLASTIC 4.00 X 6.00
5	1	X	INCLUDE THIS PAGE OF DOCUMENT

1 Push tubing all the way onto metal tubes of probe tip being careful not to damage the tubing interior side walls.

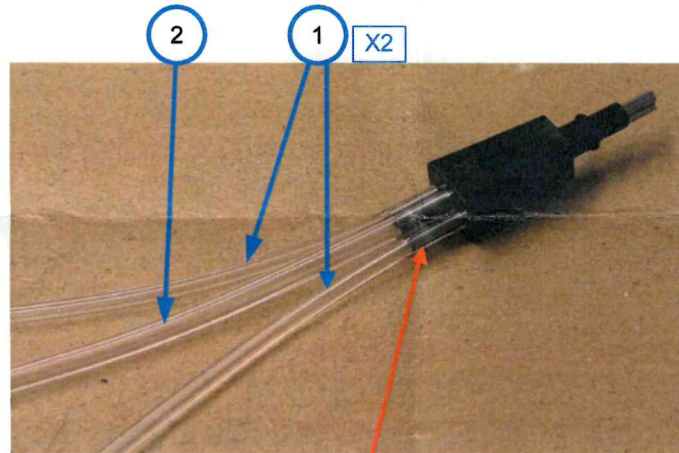

1 Inspect tubing, over metal tubes of probe tip, for damage. If damage is visible, check inside of metal tubing for blockage.