



Instruction Manual GemOro "Sparkle Spa" PERSONAL ULTRASONIC CLEANER

Model SS-1780 (Stock # CL1722)



SPECIFICATIONS:

- Bright Blue LED Illuminated Stainless Steel Tank
- 1 Pint / 600ml Capacity
- 42,000 Energy Producing Sound Waves Per Second
- Electronic Pushbutton Timer with Auto Shut-Off
- Transparent Cover / Lid
- Attractive Metallic Silver Color
- Removable Basket Included
- 35 Watts - 50/60HZ

User Operating Procedure & Manual - READ BEFORE OPERATING!

THE FIVE BASIC STEPS:


- Step 1 - Unpack the "[Sparkle Spa](#)" and basket from its box and plastic wrapping.
- Step 2 - Connect to electrical power source. DO NOT turn the ultrasonic on unless you have first filled up the tank with a water / solution mixture.
- Step 3 - Lift the "[Sparkle Spa](#)" lid to expose the tank and add the appropriate mixture of water / [GemOro Ultrasonic Cleaning Solution Concentrate](#) (sold separately) to the tank and fill the solution level to within approximately 1/2 inch from the top of the stainless steel tanks rim or to the MAX fill line as clearly marked on the rear center portion of the tank wall. DO NOT allow the water level to evaporate below this line as damage may occur and the warranty will become void. Depending on the item being cleaned, water may also be mixed with alternative appropriate cleaning solutions (liquid soaps, etc.) to achieve the desired results. DO NOT use flammable liquids, ammonia or acid / water mixtures in the ultrasonic tank as damage may occur and the warranty will become void. Keep the lid closed when not in use to reduce solution evaporation.
- Step 4 - Place the item to be cleaned in the supplied basket and then submerge it in the tank and close the lid. (As a suggestion, in the event small items such as diamond earrings, charms or small parts require cleaning, a [household stainless steel tea strainer](#) or [fine mesh stainless steel basket](#) may be used to hold these items safely during the cleaning process, with the tea strainer then being placed in the supplied basket.) DO NOT place items to be cleaned directly on the tank bottom as damage to the transducer may occur. Damage to the transducer as a result of placing items on the bottom of the tank will void the warranty. Dents and scars on the tanks bottom are evidence of items being placed inappropriately in the tank without a basket. DO NOT attempt to clean soft, water porous stones such as pearls, turquoise, opals and emeralds, etc. as damage to the stones may occur. If you are uncertain of the type of stone which is in the jewelry that you would like to clean and whether it is appropriate for cleaning in an ultrasonic cleaner, first consult with a professional jeweler.
- Step 5 - Press the ON button to start the cleaning process. While ON the cleaning cycle will last 3 minutes at which time the ultrasonic will automatically shut-off. Items which require additional cleaning may be left in the basket within the tank. The ON button may then be pressed for additional cleaning cycles as needed. Always rinse the item off with water to remove the remaining solution and to dislodge / remove any remaining loosened dirt from its surface once the cleaning process has been completed. DO NOT place fingers or other body parts in the tank while the ultrasonic is operating.

MAINTENANCE & CLEANING

- Change the solution in the tank and clean the tank regularly ONLY after first unplugging the [SS-1780](#) to avoid potential electrocution,

- Unplug the [SS-1780](#), take the basket out of the tank and then grasp the ultrasonic with both hands and with the cover / lid open, carefully pour out the old solution into your sink and drain. Wash all dirt and residue from the tanks bottom with a standard household non-ammoniated, non-acidic, mild cleaning solution and a paper towel. Rinse tank out with water while being careful not to allow water to overflow onto other parts of the machine as damage to its electronics may result and the warranty could be voided.
- The [SS-1780](#) outer shell may also be cleaned using a standard household non-ammoniated, non-acidic, mild, non-abrasive cleaning solution and a paper towel. Avoid placing too much cleaning solution on the outer shell as the excess solution may seep into the ultrasonics electronics potentially causing damage. DO NOT submerge the [SS-1780](#) into water as damage to its electronics may result and the warranty will become void.

NOTE: DO NOT submerge the SS-1780 into water as damage to its electronics may result and the warranty will become void.

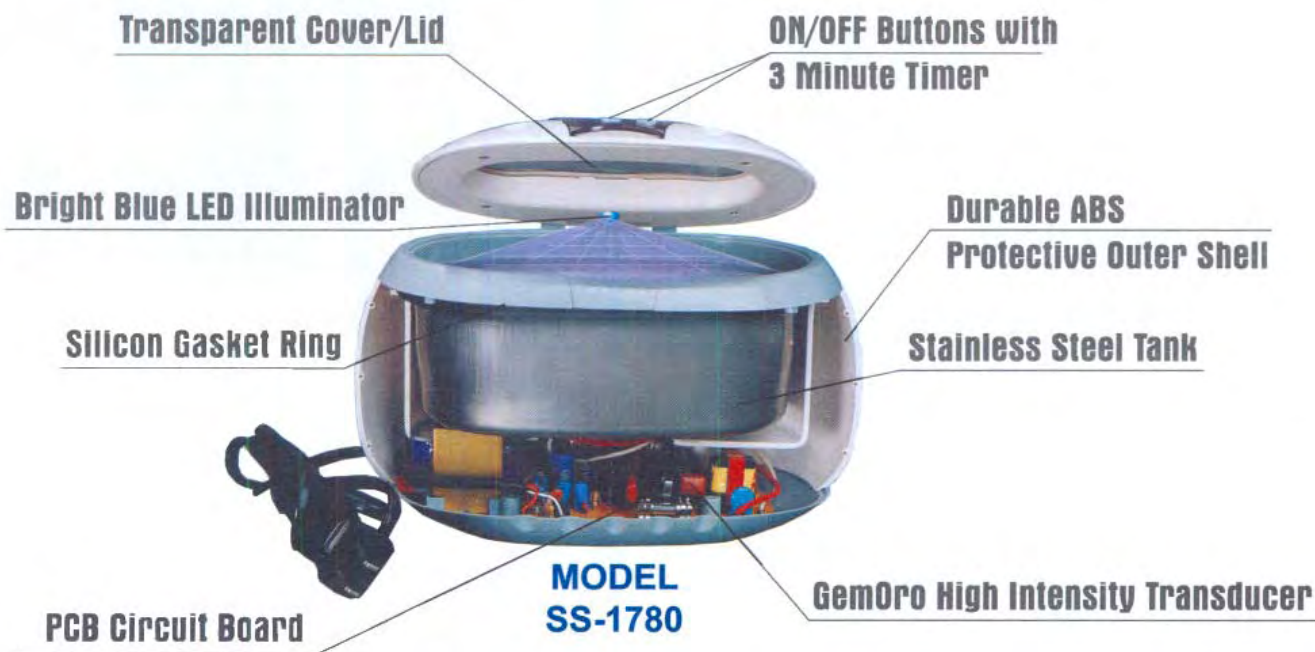

ENGINEERING EXCELLENCE - DESIGN SUPERIORITY
ULTIMATE CLEANING PERFORMANCE

WARRANTY

Congratulations on your purchase of the GemOro "[Sparkle Spa](#)" PERSONAL ULTRASONIC CLEANER! Your ultrasonic features a ONE YEAR LIMITED WARRANTY from the date of its purchase assuming the purchaser fills out the enclosed WARRANTY REGISTRATION FORM and mails it back to the following address (postage prepaid) along with a copy of their invoice (bill of sale), within 30 days of its purchase. If this criteria is not followed, the [SS-1780](#) will automatically be covered by a 90 DAY LIMITED WARRANTY from the date of your ultrasonics purchase, as noted on the bill of sale (if supplied) or through the [SS-1780's](#) serial number tracking system as interpreted by the factory. The extent of the warranty coverage shall be for repair or replacement only and at the discretion of the factory. In the event the [SS-1780](#) is no longer available or has been discontinued and warranty coverage is applicable, at the factory's sole discretion, an equivalent ultrasonic cleaner may be substituted in place of the defective [SS-1780](#). The purchaser shall incur the cost for return postage, insurance and handling for all warranty and non-warranty repairs.



FDJ On Time presents the manufacturer's instructions in a useful, organized form. Original instructions are available with the product.